TOSHIBA

Blu-ray Disc™ Player



BDX1300KB

Owner's Manual

English

1 Important

Safety and important notice

Warning:

- Risk of overheating! Never install the product in a confined space. Always leave a space of at least 10cm around the product for ventilation. Ensure curtains or other objects never cover the ventilation slots on the product.
- Never place the product, remote control or batteries near naked flames or other heat sources, including direct sunlight.
- Only use this product indoors. Keep this product away from water, moisture and liquid-filled objects.
- Never place this product on other electrical equipment.
- Keep away from this product during lightning storms.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

LASER
CAUTION:
USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.
CAUTION:
VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED. DO NOT STARE INTO BEAM.
LOCATION:
INSIDE, NEAR THE DECK MECHANISM.

EU Conformity Statement

CE

This product is marked with "CE" and complies therefore with the applicable harmonized European standards listed under the Low Voltage Directive 2006/95/EC and the EMC Directive 2004/108/EC. ErP Directive 2009/125/EC
Responsible for CE-marking is
TOSHIBA INFORMATION SYSTEMS (U.K.) LTD,
Toshiba Court, Weybridge Business Park,
Addlestone Road, Weybridge,Surrey,KT15 2UL,
United Kingdom

Disposal of your old product and batteries

Following information is only valid for EU-member States:
Disposal of products

The crossed out wheeled dust bin symbol indicates that products must be collected and disposed of separately from household waste.
Integrated batteries and accumulators can be disposed of with the product. They will be separated at the recycling centres.
The black bar indicates that the product was placed on the market after August 13, 2005.
By participating in separate collection of products and batteries, you will help to assure the proper disposal of products and batteries and thus help to prevent potential negative consequences for the environment and human health.
For more detailed information about the collection and recycling programmes available in your country, please visit our website (***http://www.recycle-more.co.uk/***) or alternatively please contact your retailer where the product was purchased.

Disposal of batteries and/or accumulators

The crossed out wheeled dust bin symbol indicates that batteries and/or accumulators must be collected and disposed of separately from household waste.
If the battery or accumulator contains more than the specified values of lead (Pb), mercury (Hg), and/or cadmium (Cd) defined in the Battery Directive (2006/66/EC), then the chemical symbols for lead (Pb), mercury (Hg) and/or cadmium (Cd) will appear below the crossed out wheeled dust bin symbol.
By participating in separate collection of batteries, you will help to assure the proper disposal of products and batteries and thus help to prevent potential negative consequences for the environment and human health.
For more detailed information about the collection and recycling programmes available in your country, please visit our website (***http://www.recycle-more.co.uk/***) or alternatively please contact your retailer where the product was purchased.

General Information

This appliance may be fitted with a non-rewireable plug. If it is necessary to change the fuse in a non-rewireable plug the fuse cover must be refitted. If the fuse cover is lost or damaged, the plug must not be used until a replacement available from the appliance manufacturer is obtained. If the plug has to be changed because it is not suitable for your socket, or becomes damaged, it should be cut off and an appropriate plug fitted following the wiring instructions below. The plug removed must be disposed of safely as it is hazardous if inserted into a live socket.

IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:
BLUE: NEUTRAL
BROWN: LIVE
As the colours of the wires in the mains lead of this unit may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:
The wire that is coloured blue must be connected to the terminal in the plug which is marked with the letter N or coloured black.
The wire that is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.
Do not connect either wire to the earth terminal which is marked by the letter E or by the safety earth symbol ⏚ or coloured green or green-and-yellow.
Use a 5A BS1362 fuse which is approved by ASTA or BSI. Always replace the fuse cover after changing the fuse.

Copyright notice

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Rovi Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Rovi Corporation. Reverse engineering or disassembly is prohibited.

Notice for Trademark

HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

BONUS*VIEW* ™

Blu-ray Disc™, Blu-ray™, BD-Live™, BONUSVIEW™, and the logos are trademarks of the Blu-ray Disc Association.

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

Manufactured under license under U.S. Patent Nos: 5,956,674; 5,974,380; 6,226,616; 6,487,535; 7,392,195; 7,272,567; 7,333,929; 7,212,872 & other U.S. and worldwide patents issued & pending. DTS-HD, the Symbol, & DTS-HD and the Symbol together are registered trademarks & DTS-HD Master Audio | Essential is a trademark of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.

'AVCHD' and the 'AVCHD' logo are trademarks of Panasonic Corporation and Sony Corporation.

'DVD Video' is a trademark of DVD Format/ Logo Licensing Corporation.

Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.

2 Your Product

Feature highlights

High-Definition entertainment
Watch high-definition content disc with HDTV (High Definition Television). Connect it through a high speed HDMI cable. You can enjoy excellent picture quality up to 1080p resolution with the frame rate of 24 frames per second with progressive scan output.

BD-Live™
Connect this player to the movie studios website via the LAN jack to access a variety of up-to-date content (e.g. refreshed previews and exclusive special features).

Blu-ray Disc™ Java

Blu-ray Disc™ Java(BD-J) Application
The BD-ROM format supports Java for interactive functions. "BD-J" offers content providers almost unlimited functionality when creating interactive BD-ROM titles.

Remote Control

▲ OPEN/CLOSE
- Open/ Close the disc tray

Number Buttons
- Select numbered items in a menu
- Press to enter track/ chapter/ title numbers/password directly

OSC
- To access On Screen Control menu

CLEAR
- To clear an entry or the bookmark and program you set

MC(Media Center**)**
- To open/close Media Center

POP UP/MENU
- To display a menu included on many Blu-ray Disc™/DVD video discs

OK
- Acknowledge/ Confirm menu selection

◀ ▶ ▲ ▼
- Navigation/ Cursor buttons for moving to the left / right / up / down
- Press ◀/ ▶ during JPEG playback to rotate the current photo track, but the JPEG playback will be paused

RETURN
- Return to previous menu

TOP MENU
- To display the disc title during playback

PROGRAM
- To access program list.

DIGEST
- To access JPEG thumbnail view during playback

SUBTITLE
- To display subtitle; press repeatedly to select different subtitles available in your disc

AUDIO
- To select the sound stream; press repeatedly to select different audio streams available in your disc

ANGLE
- Switch the camera angle during playback

REMOTE SIGNAL EMITTER
- Point remote control to the sensor on the front panel

ON / STANDBY ⏻
- To switch the Blu-ray Disc™ Player to ON or standby mode

SETUP
- Enters or exits the system setup menu

REPEAT A-B
- To repeat from A to B

REPEAT
- Selects various repeat mode.

GOTO
- To goto a title, chapter, track or playing time

DISPLAY
- To display a window to locate a title, chapter or track

◀◀I / I▶▶
- Instant replay/instant search

◀◀ / ▶▶ F.R & F.F
- Fast reverse/ fast forward

▶/II PLAY/PAUSE
- Start/Pause playback

I◀◀ / ▶▶I PREV & NEXT
- Skip to previous/next chapter/ title/track

■ STOP
- Stop playback

I▶
- Do a slow forward during normal playback

II▶
- Advance the picture frame by frame during pause mode

ZOOM
- To zoom out/in

BOOKMARK
- To bookmark at any point during playback

PIP (Picture in Picture)
- Switch on or off the secondary video

PIP AUDIO
- Switch the secondary audio of secondary video(PIP) to on or off

HDMI
- To change resolution of HDMI video output to fit TV. Such as 1080p, 1080i… etc.

3 Connections

Make the following connection to use this product.

Connecting to a TV

Connect the product to TV via HDMI jack to view the playback from the disc.

Connect to the HDMI Jack

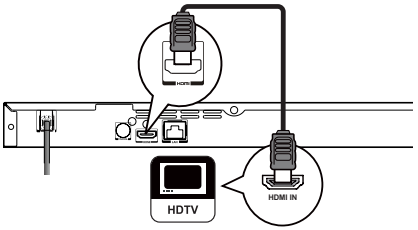

1. Connect a HDMI cable from the HDMI output jack on this product to the HDMI input jack on the TV.

Note:

– You can optimize the video output by pressing the HDMI button repeatedly to select the best resolution which the TV can support.

Optional Connection

Option 1: Connect to the digital amplifier/ receiver

Option 2: Connect to network

Option 1: Connect to the digital amplifier/receiver

Route the sound from this player to other device to enhance audio output.

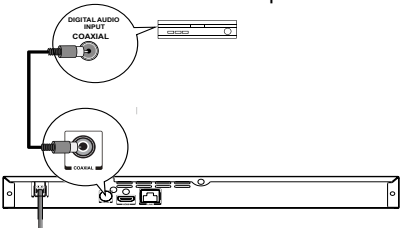

1. Connect a coaxial cable from the COAXIAL jack on this product to the COAXIAL jack on the device.

Option 2: Connect to network

Connect this product to the network to enjoy BD-Live™ bonus content and software upgrade by network.

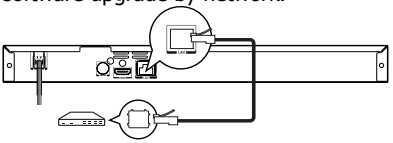

1. Connect the network cable from the LAN jack on the product to the LAN jack on the network system.

Connect USB device

A USB flash drive provides an additional memory to software upgrade and enjoy BD-Live™ bonus content.
You can also enjoy playing back MP3/JPEG/ MPEG4/ files stored in the USB flash drive.



1. Connect the USB flash drive to the USB jack on this product.

Notes:

*- To enjoy BD-Live™ bonus content, as your local storage, use a **1 GB or larger USB flash drive.***

- For some Blu-ray™ discs with BD-Live™ feature, you may need to plug in the USB flash drive before loading the disc. Otherwise, the disc may not playback.

- TOSHIBA does not guarantee 100% compatibility with all USB flash drives.

Connect Power

1. Connect the AC power cable to:
   - the wall socket.
   - The product is ready to be set up for use.

Notes:

– Before connecting the AC power cord, ensure you have completed all other connections.

– Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back of the unit.

– The type plate is located on the back of the unit.

4 Preparation

Always follow the instructions in this chapter in sequence.

Note:

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Prepare the remote control

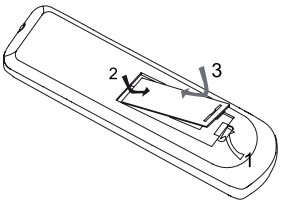

1. Open the battery compartment.
2. Insert one R03 battery with correct polarity (+/-) as indicated.
3. Close the battery compartment.

Notes:

- If you are not going to use the remote control for a long time, remove the battery.

- Risk of explosion! Keep battery away from heat, sunshine or fire. Never discard battery in fire.

● The maximum operable ranges from the unit are as follows.

- Line of sight: approx. 10 m
- Either side of the centre: approx. 7 m within 30°
- Above: approx. 7 m within 30°
- Below: approx. 7 m within 30°

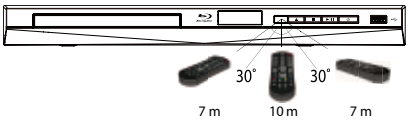

Setting up the player

Find the correct viewing input

1. Press ⏻ to turn on this product.
2. Turn on the TV and switch to the correct video-in input (refer to the TV user manual on how to select the correct input).

Initial Setting

When you turn on this unit for the first time, you need to follow these steps.

1. A welcome page will be displayed when this product is powered on.
2. Press OK to enter language setting.
3. Select your desired language, resolution and aspect ratio using ▲/▼, then press OK.
4. Press SETUP to exit the Setup menu.

Use the SETUP menu

1. Press SETUP to display the Setup menu when the Blu-ray Disc™ Player is playing or no disc. And press SETUP to exit the Setup menu.

Tip:

- When playing high-definition sources, you must press STOP ■ *button to enter* SETUP *interface.*

Select menu display language

1. Press SETUP**, [General Setting]** menu is displayed.
2. Select **[Language],** then press ▶.
3. Select **[OSD],** then press ▶.

- The language options may vary for different regions.

4. Press ▲/▼ to select a language, then press OK.

Note:

- If this disc player is connected to a HDMI CEC compliant TV, skip this setting. It switches automatically to the same OSD menu language as per your TV setting.

5 Playback

Playback Functions

Basic Playback

1. Press ⏻ button on the front panel or the remote control, your Blu-ray Disc™ player will turn on.
The unit will take around 20 seconds to warm up. When the power supply is first switched on, the setup of the Power Down Mode is in Normal mode.
2. Turn on the TV, and then select the input setting on the TV that matches the connection method you used to connect your player.
3. Press OPEN/CLOSE ⏏ to slide out the disc tray.
4. Place a disc on the disc tray with the label facing up, and then press OPEN/CLOSE ⏏ to slide back and close the disc tray.
The disc loading time depends on the types of disc you are loading, and loading a Blu-ray Disc™ will take longer time.
5. If the disc does not start playing automatically, please press ▶/❚❚ to start playback.
6. If a Blu-ray Disc™ or DVD menu displays, use cursor buttons to select PLAY. Then, press OK to confirm.
7. To eject the disc, press OPEN/CLOSE ⏏.

Pause playback

1. Press ▶/❚❚ to pause playback. The sound will be muted.
2. Press ▶/❚❚ to resume the playback.

Stop playback

1. Press STOP ■ button once to go to resume mode, the TV screen will show the resume logo.
2. Press STOP ■ twice to stop the playback completely.
3. Press ▶/❚❚ to resume playback from the point where playback is stopped or from the beginning of the disc after the playback is completely stopped.
Not all Blu-ray™ discs support the resume feature.

Fast Forward and Fast Reverse

1. Press F.F ▶▶ to fast forward through the disc. The fast forward speed changes based on how many times you pressed the button. The speed will increase through the following sequence:
2X, 4X, 8X, 16X, 32X
2. Press ▶/❚❚ to resume playback.
3. Press F.R ◀◀ to fast reverse through the disc. The fast reverse speed changes based on how many times you pressed the button. The speed will increase through the following sequence:
2X, 4X, 8X, 16X, 32X
4. Press ▶/❚❚ to resume playback.

Instant Search and Instant Replay

1. During playback, press and hold ▶▶ button, you can search 30 seconds forward.

2. During playback, press and hold ◀◀ button, you can instant replay the content from 10 seconds before.

Previous and Next

During playback, press PREV ⏮ button, and you can skip back to the previous chapter or track. Each press of this button will allow you to skip a chapter or track till the beginning of the disc.
Press of NEXT ⏭ button during playback will allow you to skip the playback to next chapter or track.

Slow Forward

1. Press ❙▶ during normal playback. The slow forward speed is 1/16 in default.
2. To change slow forward speed, press ❙▶ repeatedly, and the slow forward speed will be changed in the following sequence: 1/16, 1/8, 1/4, 1/2, normal.
3. To exit slow forward mode and return to normal playback, press ▶/❚❚.

Step Forward

Use this feature to help you to enjoy the video frame by frame.
1. Press ▶/❚❚ during normal playback, then playback will change to pause state.
2. Press ❚❚▶ repeatedly to advance the picture frame by frame.
3. Press ▶/❚❚ to resume normal playback.

HDMI

When there is file or disc being played, it is not allowed to switch resolution through the HDMI button of the Remote Control.

Advanced Playback

DISPLAY
Press this button and the screen will display some information about disc, such as: Title number, Chapter number, Track number, Elapsed Time, Mode, Audio, Angle, and Subtitle languages. Press this button again to turn off the information display.
During DVD/CD playback, you may edit the chapter and track.

REPEAT
Press REPEAT repeatedly to select different repeat modes.
Blu-ray Disc™: Repeat Chapter and Title.
DVD: Repeat Chapter, Title and All.
VCD PBC Off/CD-DA/JPEG/MP3: Repeat Track and All.

A-B
To play certain section within the video or song, press A-B button to set the start point. Then, press A-B button again to set the end point and complete the setting. The selected section will be played repeatedly.
Press A-B button the third time to cancel this function.
The end point cannot be set until 5 seconds of playback has elapsed from the start point.
Not all Blu-ray™ discs support the repeat A-B feature.

GOTO
During playback, press GOTO button to edit Title, Chapter, and Time.
Press ◀/▶ and OK button on the remote control to select Title, Chapter, or Time. Then press the numeric buttons or ▲/▼ and then press OK. The playback will skip to the desired location.
For Time Search, press ▲/▼ to select Title or Chapter time search.

SUBTITLE
Press this button repeatedly and the screen will display "X/XX XXX" or "Off". The "X" indicates the current number of this language; "XX" indicates the total number of language; "XXX" indicates the language.
The number of available languages depends on the disc.

RETURN
Press this button to return to the previous on-screen menu in setup menu such as External Memory Information, Parental Control, Country Code, etc.
During MP3/JPEG/VIDEO playback, press RETURN once, it will return back to Media Center page.
During VCD disc playback and PBC On is selected, press the button to return to PBC Menu.

ANGLE
During playback, press this button to change the angle of the picture. The screen will display "Angle X/X." The first "X" indicates the current number of angle, and the second "X" indicates total number of angle.
Not all Blu-ray™ or DVD has the multi-angle feature. The screen will take around 5 seconds to change.

TOP MENU
You may press this button at any time, and the Blu-ray Disc™ or DVD video disc playback will pop up the disc menu.

POP UP/MENU
During Blu-ray Disc™ playback, press POP UP/MENU to display the disc title, and the playback will not be stopped even the menu is on the screen.
1. Press the ▲/▼/◀/▶ buttons to select an option, then press OK to confirm.
2. Press POP UP/MENU to close the menu.
During DVD playback, press POP UP/MENU to open the disc menu.
During VCD playback, press POP UP/MENU to switch PBC On/Off.
During displaying USB and Data Disc file content in media center, press POP UP/MENU to add the Photo/Music/Video files to the playlist.
1.Press ▲/▼/◀/▶ buttons to select an option under the Photo/ Music/ Video files.
2. In the file browser, press ▶ to select the file(s) to be added to the playlist. "√ " will appear beside the selected files.
3. Press POP UP/MENU button, a pop up menu will appear, then press ▲/▼ and OK button to select "Add to Playlist" to add the files to the Playlist. "Select all" and "Clear all" options are also available. Select "Cancel" to exit the pop up menu.
All the selected files will be added to the "Playlist" folder. You can play or delete the files in the playlist.
Press POP UP/MENU to delete the selected files in"Playlist".

SETUP
Press the SETUP button, and the screen will display some information about the player, such as:
- General Setting
- Display Setting
- Audio Setting
- System Information

PROGRAM
During CD/DVD/VCD playback, you can press this button to edit the sequence of the playlist.

BOOKMARK
During VCD/DVD/ disc playback, press the BOOKMARK button to add the bookmark; press and hold for a few seconds to display the list of bookmark which you added before on the screen, then you can press the OK button to select the bookmark or CLEAR button to delete the bookmark.

AUDIO
Press AUDIO button on the remote control to select the audio streams that set within the

Blu-ray™ or DVD disc.
The screen will display:
AUDIO: X / XX XXX XXXX
"X" - The Current Audio Stream Number
"XX" - The total number of Audio Stream
"XXX" - Audio Language
"XXXX" - Audio Technology

MC

Press this button to play media files in the USB.

ZOOM

Press ZOOM button repeatedly to Zoom in/out playback in the video.
Zoom mode : Zoom 2x -> Zoom 3x -> Zoom 4x -> Zoom 1/2 -> Zoom 1/3 -> Zoom 1/4.

DIGEST

During playback of JPEG disc, press DIGEST to view a page of 12 thumbnail images.
- Use ▲/▼/◀/▶ to select an image.
Press OK to view the selected image in full-screen and subsequent images will be displayed one after another automatically.
- Press PREV |◀◀/NEXT ▶▶| to view the previous or next thumbnail screen.

PIP AUDIO

Press PIP AUDIO button to open the secondary audio of secondary video(PIP's sub-window video).

OSC

Press OSC to open On Screen Control menu during playback. In this menu, you can make some playback-related control.
The on screen control contains following items:
[Title]: The title in current playback/titles in total. Select your desired title to playback.
[Chapter]: The chapter in current playback/ chapters in total. Select your desired chapter to playback.
[Time]: View the elapsed/remaining playback time of title/chapter. Use ▲/▼ to view: the elapsed playback time of title, the remaining playback time of title, the elapsed playback time of chapter, and the remaining playback time of chapter.
[Mode]: Select playback mode among shuffle, random, and normal.
[Audio]: The Blu-ray Disc™/DVD disc's soundtrack language. Use ▲/▼ to view the audio available in the disc and select your desired Audio type.
[Angle]: The angle view of current playback/ the angles in total. Please reference Playback > Angle to see more detailed info. Use ▲/▼ to select your desired angle view.
[Subtitle]: The Subtitle in current playback. Use ▲/▼ to view the subtitles available in the disc and select your desired subtitle type or turn it off.
[Subtitle Style]: When you play the Blu-ray Disc™ or DVD disc and if it has external subtitle, you will see it in OSC menu.
[Bitrate]: Use ▲/▼ to select audio or video bitrate.
[Still Off]: Close the Still feature of DVD disc.
For some DVD discs, a certain video picture will be frozen as a still picture during the process of playback to let the user has a better view of certain picture. To continue playback, select Still Off.
[Instant Search]: Instant search 30 seconds forward.
[Instant Replay]: Replay the content from 10 seconds before.

Tip:

- The specified operation for each item will vary with disc types. And some items are available only when the disc is supportable.

Blu-ray Disc™ BONUSVIEW™

Playing Secondary Video (Picture-in-Picture) and Secondary Audio is for Blu-ray Disc™ only. Secondary video can be played from a disc compatible with the Picture-in-Picture (PIP) function. For the playback method, refer to the instructions for the disc.

1. Turn on secondary video by pressing the PIP button.
2. Press the PIP AUDIO button to select the secondary audio, and select an option except Off. The secondary audio is opened, you can hear the disc secondary video sound.
In order to hear the secondary audio, the PIP feature on the disc must be turned on.
3. Press the PIP button again to turn off the secondary video.

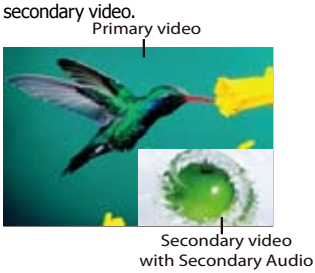

This function is not available when the primary video is played in Search, Slow-Motion, or Frame-by-Frame or Fast Forward/ Reverse mode.
To listen to the secondary audio, the digital audio output must be set to "Bitstream", "Re-encode" or "PCM". Otherwise, only the primary audio can be heard.

Notes:

- Not all the Blu-ray™ discs can support this function.
-High Definition PIP (Second Video) is not supported.

Watermark
This product uses Cinavia technology to limit the use of unauthorized copies of some commercially-produced film and videos and their soundtracks. When a prohibited use of an unauthorized copy is detected, a message will be displayed and playback will be interrupted.
More information about Cinavia technology is provided at the Cinavia Online Consumer Information Center at http://www.cinavia.com. To request additional information about Cinavia by mail, send a postcard with your mailing address to: Cinavia Consumer Information Center, P.O. Box 86851, San Diego, CA, 92138, USA.

6 Customizing

This section describes the various setting option of this Blu-ray Disc™ player.

If the setup option is greyed out, it means the setting cannot be changed at the current state.

General Setting

1. Press SETUP button on the remote control.The Setup Menu appears.

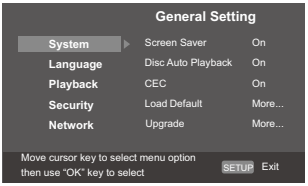

2. Press ▼ to select an option, then press ▶ to access.
3. Press ▲/▼ to select a setup option and press ▶.
4. Select the setting you wish to change and press OK to confirm.
   - Press ◀ to return to the previous menu.

[System]
To change the following system option to personalize your Blu-ray Disc™ player.

- **[Screen Saver]**
  Turn On or Off the screen saver mode. It helps to protect the TV screen.
  { **On** } – Set the screen saver active after approximately 5 minutes with no operation. You can turn off the screen saver by pressing the SETUP button.
  - The Blu-ray Disc™ player will switch to standby mode if there is no operation after the screen saver is engaged for approximately 10 minutes.
  { **Off** } – Turn off the screen saver mode. The Blu-ray Disc™ player will not switch to standby mode automatically.
- **[Disc Auto Playback]**
  Turn On or Off the disc automatic playback switching mode.
  {**On**} – The disc playback automatically after loading.
  {**Off**} – Turn off disc auto playback mode.
- **[CEC]**
  This player supports REGZA-LINK which uses the HDMI CEC (Consumer Electronics Control) protocol. You can use one single remote control to control all REGZA-LINK-compliant devices that are connected through HDMI connectors.
  {**On**} - Turns on REGZA-LINK features.
  -With CEC on, during TV standby with the Blu-ray Disc™ player on, pressing SETUP, PLAY/PAUSE will power on the TV. When you turn the TV off, this unit will automatically turn off.
  {**Off**} - Disables REGZA-LINK features.
- **[Load Default]**
  Reset all settings of Blu-ray Disc™ player to initial default state.
  - Follow the instruction on the TV screen to confirm the default setting operation.
  1. Select **Load Default**.
  2. A dialogue box pops up shown as below. Select OK.

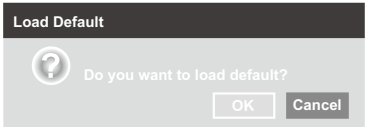

3. It may take awhile when loading default is in progress. Please wait...

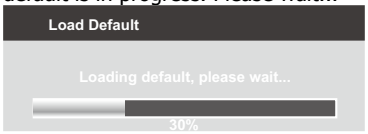

4. TV will display as follow:

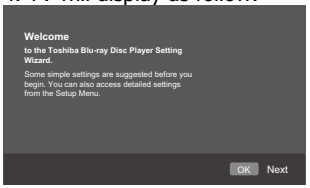
Welcome
to the Toshiba Blu-ray Disc Player Setting Wizard.
Some simple settings are suggested before you begin. You can also access detailed settings from the Setup Menu.
OK Next

5. Press OK, enter language setting.
Press▲/▼ to select a language option.

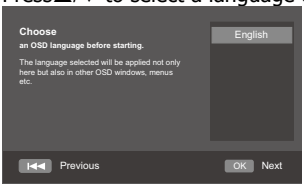
Choose
an OSD language before starting.
The language selected will be applied not only here but also in other OSD windows, menus etc.
English
Previous
OK Next

6. Press OK, enter Resolution setting.

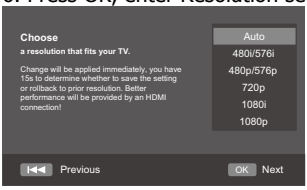
Choose
a resolution that fits your TV.
Change will be applied immediately, you have 15s to determine whether to save the setting or rollback to prior resolution. Better performance will be provided by an HDMI connection!
Auto
480i/576i
480p/576p
720p
1080i
1080p
Previous
OK Next

Press ▲/▼ to select an option. Press OK.
Select "Yes" or "No" using ▲/▼.

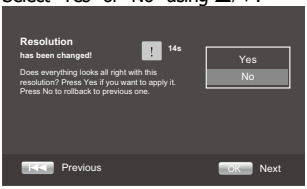
Resolution
has been changed!
14s
Does everything looks all right with this resolution? Press Yes if you want to apply it. Press No to rollback to previous one.
Yes
No
Previous
OK Next

7. Press OK, enter Aspect ratio setting.

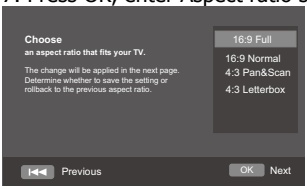
Choose
an aspect ratio that fits your TV.
The change will be applied in the next page. Determine whether to save the setting or rollback to the previous aspect ratio.
16:9 Full
16:9 Normal
4:3 Pan&Scan
4:3 Letterbox
Previous
OK Next

Press ▲/▼ to select an option. Press OK.

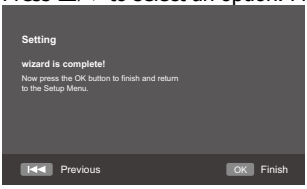

8. Press OK to return to [General Setting] Menu.

- **[Upgrade]**
For software upgrades to enhance performance, you could select the following upgrade method and start to upgrade.
{**Disc**}/{**USB Storage**}/{**Internet**}
SW upgrade by Disc/USB Storage
Upgrade the software from the disc or USB flash drive.

1. Insert the disc or connect the USB flash drive which contains the upgrade file package.
2. Follow the instruction on the TV screen to confirm upgrade operation.
- The system will reboot after 5 seconds or OK key is pressed.

Notes:

- If set [Disc Auto Playback] to [Off], after you insert the disc that contains the upgraded information to upgrade system, you have to start upgrade from this option of SETUP Menu.

- If the upgrade file package did not pass the verification, error prompt is displayed , check the package again (such as the package is not complete)

- Make sure the firmware version is not an old version.

- When you upgrade the system using USB flash drive, you should make a new folder named UPG_ALL, and copy the upgrade file into this folder.

SW upgrade by Internet introduction

There are two modes to upgrade via internet : Automatic Mode and Interactive Mode.

Automatic Mode:

The player will check the internet whether it is connected automatically when powered on. If connected, player will try to connect the Toshiba server to check if there is new firmware for the player.

If yes, the player will pop up a message on the screen to inform you that an upgrading firmware is available on the internet. You can choose whether to upgrade or not.

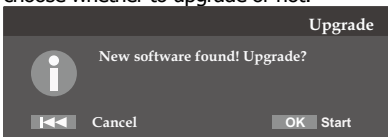

Interactive Mode**:**

You can also do Internet upgrade via setup menu.

You should make sure that the player is connected to the internet first.

Press SETUP button of the remote control, then choose "System -> Upgrade -> Network" and press OK button. Then the player will connect the Toshiba server to check if there is new firmware for the player.

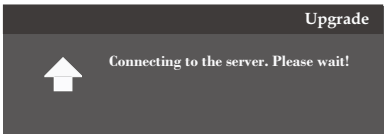

If yes, the player will pop up a message on the screen and you can choose whether to upgrade or not.

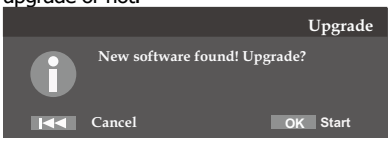

If no, the player will pop up a message on the screen to inform you that there is no new firmware for the player.

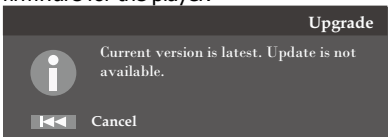

Remark :
If you choose to upgrade the new FW ,
1.The player will begin to download the upgrade file and pop up a message to show the progress.

2. When download is finished, the player will pop up a message for you, and you can choose whether to proceed with the upgrading or not. If you choose to upgrade, the player will begin to upgrade, and pop up a message to show the progress. When upgrade is done, the player will restart.

Attention! Do NOT cut off the power supply when the firmware is upgrading! Or the player might become unworkable.

- **[External Memory]**
  External Memory would be used in BD-Live™ function. When you plug in the USB flash drive which has at least 1GB free space to play BD-Live™ function, the Blu-ray Disc™ system would make a directory named BUDA automatically. Information will display the Free size.
  1. Press OK.
  2. Follow the instruction on the TV screen to select {Information}.

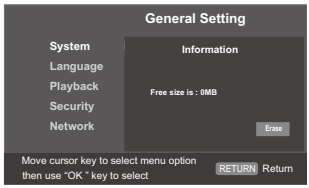

  3.Press OK to select "Erase", the data in the BUDA folder will be cleared.

- **[Power Down Mode]**
  Quick Start can reduce the time of Power On or Power Off significantly. But the power consumption is higher in Quick Start mode.
  Setting methods:
  Setup Menu -> General Setting -> System -> Power Down Mode -> Normal/Quick Start (Default as Normal).
  Choose Quick Start to go into Quick Start mode. This mode will only be activated upon your next standby Off/On.
  Generally, in Normal mode, Power On or Power Off takes longer time and its standby power consumption is low. In Quick Start mode, Power On or Power Off takes shorter time and its standby power consumption is higher.

  Notes:
  - Please be noted that the responding time to the video output varies for different TV, therefore the responding time to power on the TV in Quick Start mode may vary.
  - The player will reset to Normal mode whenever the AC power recovers from a loss.

[Language]
Set up the OSD(On-Screen Display), Menu, Audio and Subtitle default language for the player.

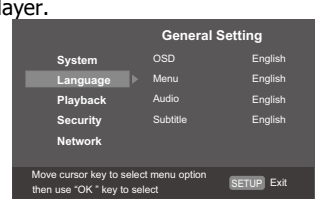

- **[OSD]**
  Select the default on-screen display language.
- **[Menu]**
  Select the default menu language.
- **[Audio]**
  Select the default audio language.
- **[Subtitle]**
  Select the default subtitle language.

[Playback]

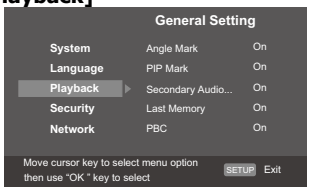

- **[Angle Mark]**
  Some Blu-ray™ discs/DVDs contain the scenes recorded with multiple angles, which allow you to enjoy the videos with your desired angles, therefore the angle mark is displayed only when the Blu-ray Disc™/DVD disc is supportable for multi-angle and Angle Mark is set to ON.
  {**On**} – Display the angle mark.
  {**Off**} – Hide the angle mark.
- **[PIP Mark]**
  The Picture -In- Picture (PIP) mode display two pictures on the TV screen at the same time, the full screen picture is called Main Window and the small inset window is called Sub Window. The PIP mark is displayed when in PIP mode and PIP Mark is set to ON.
  {**On**} – Display the PIP mark.
  {**Off**} – Hide the PIP mark.
  Note:

-High Definition PIP (Second Video) is not supported.

- **[Secondary Audio Mark]**
  {**On**} – Display Secondary Audio Mark.
  {**Off**} – Hide the Secondary Audio Mark.
- **[Last Memory]**
  If you open the disc tray or switch this Blu-ray Disc™ player to standby state during normal playback, the Blu-ray Disc™ player can memorize the end playing point, the player will start playback from the memorized point next time.
  {**On**} – Active Last Memory feature.
  {**Off**} – Disable Last Memory feature.
  Note:

-Not all the Blu-ray™ discs can support this function.

- **[PBC]**
  VCD2.0 has PBC control (Playback Control) menu, which allow you to interact with the system via menu.
  {**On**} – Display playback control menu, use NUMBER keys to select desired option.
  {**Off**} – Hide playback control menu and start playback from track1 automatically.

- **[Closed Caption]**
  Allow people who are deaf or hearing impaired, to have access to television programming by displaying the audio portion of a television programme as text on the screen.
  {**On**} – Display the Closed Caption .
  {**Off**} – Hide the Closed Caption.

[Security]

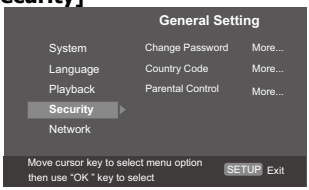

- **[Change password]**
  Follow the instruction on the TV set or change the password for locked discs and play restricted Blu-ray™ discs/ DVDs.

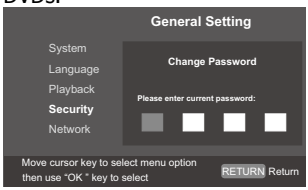

1. Use NUMBER keys to enter four digit old password. The default password is "0000".
2. Enter the new password.

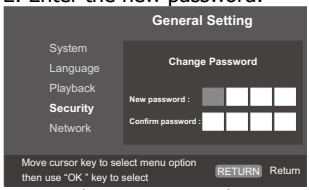

3. Enter the new password again to confirm.

- **[Country Code]**
  This ensures that you will be able to see the scenes intended for your current residential Country/Area.
  Use NUMBER Keys to enter your password, then you can choose your Country/Area.
- **[Parental Control]**
  Restricts access to discs that are unsuitable for children. These discs must be recorded with rating.
  1. Press OK.
  2. Use NUMBER keys to enter the password.

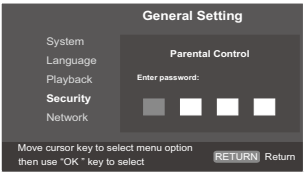

3. Select a rating level, then press OK.

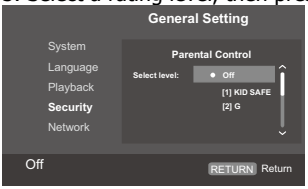

Items	Description
KID SAFE	Safe for kids
G	All children and general guidance
PG	Parental guidance
PG-13	Parental guidance for children under 13
PGR	Parental guidance Recommended
R	Restricted viewing
NC-17	No one 17 and under allowed
ADULT	Adult only

Notes:

- Rated discs above the level you set in [Parental Control] require a password to be entered.

- The ratings are country dependent. To allow all discs to play, select 'Off'.

[Network]

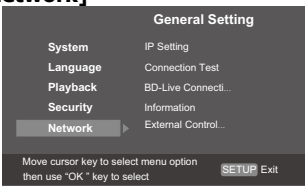

To enjoy BD-Live™ bonus contents, set up the network connection.

Note:

- Ensure that the network cable is properly connected and the router is switched on.

1. Connect the Blu-ray Disc™ player to the broadband modem or router.
2. In the Setup menu, select [Network], then press ▶.
3. Select [IP Setting] in the menu, then press OK to select [Auto]. An IP address is obtained automatically.
   If no IP address is obtained, select [Manual] to input IP Address, Subnet Mask, Default Gateway, DNS1/DNS2 and press OK to re-connect again to the network. It will try to obtain the IP address again.
4. Press RETURN or press OK to exit.

Notes:

- During [Manual] mode, if the number is entered incorrectly, press ▼ to erase the number.

- A contract with the provider is needed to connect to the Internet.

- This player does not support automatic detection of cross-cables. Use the straight (standard) LAN cable.

- Loading BD-Live™ content from the internet may take some time, depending on the file size and the speed of the internet connection.

- **[IP Setting]**
  {Auto} – Auto obtain network information.
  {Manual} – Manual setup network information.
- **[Connection Test]**
  Display Network connection status information.
- **[BD-Live Connection]**
  {Permitted} – During playback of BD-Live™ disc, the disc may automatically download all information from appointed network.
  {Partial Permitted} – During playback of BD-Live™ disc, the disc may automatically download partial of the information from appointed network.
  {Prohibited} – Disable downloading information from network.
- **[Information]**
  Display all Network Information.
- **[External Control Setting]**
  Set up the External Control Setting information.
  {**Device Name**}
  Input the Device Name (to control the Blu-ray Disc™ player from the iPhone etc.) by using the on-screen software keyboard.
  *Strings(1-15 characters), [A-Z][A-Z0-9]**
  {**User Name**}
  Input the User Name (to control the Blu-ray Disc™ player from the iPhone etc.) by using the on-screen software keyboard.
  *Strings(Max. 16 characters), [a-zA-Z0-9] [a-zA-Z0-9_-¥.]**
  {**Password**}
  Input the Password (to control the Blu-ray Disc™ player from the iPhone etc.) by using the on-screen software keyboard.
  *Strings(Max. 16 characters), [a-zA-Z0-9] [a-zA-Z0-9_-¥.]**

{**Port Number**}
Port Number should be 80 or integer from 2000 to 10000, the default value is 4000.
Note:
- Toshiba does not guarantee normal operation with all connected devices.
(*)Notes:
*- Strings(1-15 characters), [A-Z][A-Z0-9]**
You can input 1-15 characters in Device Name, [A-Z] represent the first character, you can only choose from capital letter A to Z. [A-Z0-9] represent the rest of the characters, you can choose from capital letters A to Z or numbers from 0 to 9.
*- Strings(Max. 16 characters), [a-zA-Z0-9] [a-zA-Z0-9_-¥.]**
You can input 1-16 characters in User Name and Password, [a-zA-Z0-9] represent the first character, you can choose from both the lower-case a to z and capital letters A to Z or number from 0 to 9.[a-zA-Z0-9_-¥.] represent the rest of the characters, you can choose from both the lower-case a to z and capital letters A to Z, numbers from 0-9 or symbols.

Display Setting

1. Press SETUP, **[General Setting]** menu is displayed.
2. Press ▶ to select **[Display Setting]**, then press ▼.
3. Select an option, press ▶ to access.

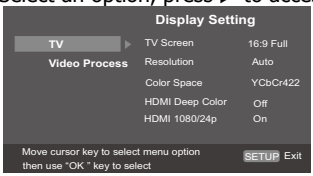

4. Press ▲/▼ to select a setup option and press ▶.
5. Select the setting you wish to change and press OK to confirm.
   - Press ◀ to return to the previous menu.
   - Press SETUP to exit the menu.

[TV]

- **[TV Screen]**
  Select the screen format according to how you want the picture to appear on the TV.
  {**16:9 Full**} – For a disc with the aspect ratio of 4:3, the output video is stretched into 16:9 full screen.
  {**16:9 Normal**} – For a disc with the aspect ratio of 4:3, the output video is resized vertically to match what will be seen on the display.
  {**4:3 Pan&Scan**} – For standard TV, it displays a wide picture on the entire screen and cuts off the redundant portions.
  {**4:3 Letterbox**} – For standard TV, it displays a wide picture with two black borders on the top and bottom of 4:3 screen.
- **[Resolution]**
  Select a video output resolution that is compatible with your TV display capability.
  {**Auto**} – Select the most suitable resolution according to the TV .
  {**480i/576i**}, {**480p/576p**}, {**720p**}, {**1080i**}, {**1080p**}
  – Select a video resolution setting that is best supported by the TV. See TV manual for details.
- **[Color Space]**
  Select a predefined Colour space of picture.
  {**RGB**} – Select RGB Colour space.
  {**YCbCr**} – Select YCbCr Colour space.
  {**YCbCr422**} – Select YCbCr422 Colour space.
  {**Full RGB**} – Select Full RGB Colour space.
- **[HDMI Deep Color]**
  This feature is available only when the display device is connected by a HDMI cable, and when it supports Deep Colour feature.
  {**30 bits**} – Output 30 bits Colour.
  {**36 bits**} – Output 36 bits Colour.
  {**Off**} – Output standard 24 bits Colour.
  Note:
  -When the colour space is "YCbCr422", even if HDMI Deep Color is set to 30bits/36bits, it is not output with Deep Colour.
- **[HDMI 1080/24p]**
  {**On**} – Enable 1080/24p video resolution setting.
  {**Off**} – Disable 1080/24p video resolution setting.
  Notes about HDMI 1080/24p:
  If you want the 1080/24p output, it should fulfill below 3 conditions:
  1.TV supports the 1080/24p display;
  2.Player choose the 1080/24p option in the setup menu;
  3.Media must be the 1080/24p video.

Notes:
- This resolution becomes effective only when the playing Blu-ray Disc™ contents are Film source.
- During HDMI 1080/24p playback, there will be no composite output.

[Video Process]

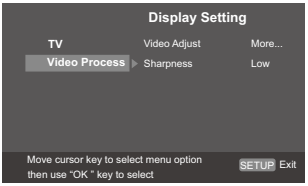

- **[Video Adjust]**
  Select a predefined setting of the video.
  1. Press OK.
  2. Press◀/▶ to adjust the video Brightness, Contrast, Hue and Saturation.
  {**Brightness**} - Press ◀/▶ to adjust the brightness of display, goes left means dark and right means bright.
  {**Contrast**} - Press ◀/▶ to adjust the contrast of display, goes left means low contrast and right means high contrast.
  {**Hue**} - Press ◀/▶ to adjust the Hue of display, goes left means low hue and right means high hue.
  {**Saturation**} - Press ◀/▶ to adjust the saturation of display, goes left means low Saturation and right means high saturation.
  3. Press RETURN to exit.

- **[Sharpness]**
  Select the level of sharpness: High, Middle, Low.
  {**High**} - Select High sharpness level.
  {**Middle**} - Select Middle sharpness level.
  {**Low**} - Select Low sharpness level.

Audio Setting

1. Press SETUP, **[General Setting]** menu is displayed.
2. Press ▶ to select **[Audio Setting]**, then press ▼.
3. Select an option, press ▶ to access.

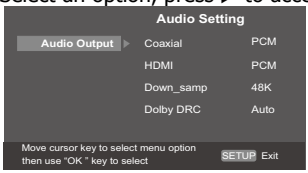

4. Press ▲/▼ to select a setup option and press ▶
5. Select the setting you wish to change and press OK to confirm.
   - Press ◀ to return to the previous menu.
   - Press SETUP to exit the menu.

[Audio Output]

- **[Coaxial]**
  Select the output mode of COAXIAL jack, options include Bitstream, PCM, Re-encode and Off.
  {**Bitstream**} – Output digital signal without any processing.
  {**PCM**} – Output digital signal with processing, only two channels export.
  {**Re-encode**} – Auto select signal type from COAXIAL jack according to the Audio stream on disc.
  {**Off**} – No output for Coaxial.
- **[HDMI]**
  Select the output mode of HDMI OUTPUT jack, options include Bitstream, PCM, Re-encode and Off.
  {**Bitstream**} – Output HDMI digital signal without any processing.
  {**PCM**} – Output HDMI digital signal with processing, only two channels export.
  {**Re-encode**} – Auto select signal type from HDMI OUTPUT jack according to the Audio stream on disc.
  {**Off**} – No output for HDMI.
- **[Down_samp]**
  Select the digital audio signal sampling frequency. (Only Coaxial)
  {**48K**} – For discs recorded at sampling rate of 48 kHz.
  {**96K**} – For discs recorded at sampling rate of 96 kHz.
  {**192K**} – For discs recorded at sampling rate of 192 kHz.

- **[Dolby DRC]**
  Select the Dynamic Range Control mode which makes it available to listen to a movie at a low volume without losing sound clarity.
  {**Off**} – Non-dynamic range compress.
  {**On**} – Dynamic range compress.
  {**Auto**} – Adjust the DRC according to input audio.
  The setting of Auto is effective for Dolby TrueHD.

System Information

1. Press SETUP, [**General Setting**] menu is displayed.
2. Press ▶ to select **[System Information]**.
   - The current software version and MAC address will be displayed.
   - Press ◀ to return to the previous menu.
   - Press SETUP to exit the menu.

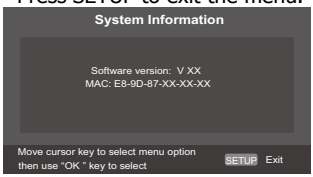
System Information
Software version: V XX
MAC: E8-9D-87-XX-XX-XX
Move cursor key to select menu option
then use "OK " key to select
SETUP Exit

7 Specification

Playable media

This product can play:
- Blu-ray Disc™-Video, BD-R/RE2.0, BDAV
- DVD, DVD-Video, DVD+R/+RW, DVD-R/-RW, DVD+R/-R DL (Dual Layer)
- Video CD/SVCD
- Audio CD, CD-R/CD-RW
- AVCHD
- USB flash drive

This owner's manual is designed to show you how to setup and operate the most commonly used functions.
If you want to view advanced functions for your Blu-ray Disc™ player, you can do so by visiting ***www.Toshiba-om.net***
If you wish to view the advanced functions but do not have access to a computer or the internet, please contact your nearest owner's manual Helpline from the number
U.K. 0844 856 0730
Please note the telephone number applies to advanced owner's manual enquiries and not general operation of the Blu-ray Disc™ player.